

## The Leading Source for Modular Ramps!

**Thank you for your interest.** All our ramp quotes are the delivered price. No extra fees or hidden costs. Some companies will quote you a price and then have extra fees they didn't tell you about (unloading fees, etc.). All our ramps come with our 30 day return policy, while most other companies do not accept any returns on their modular ramps. Our ramps are all made in the USA with the highest quality, aircraft grade aluminum. You won't find a better quality, easier to assemble ramp anywhere.

**Modular Wheelchair Ramps** - These Modular Ramps comply with ADA specifications\* and offer quick and convenient installation, re-configuration or removal. This innovative modular wheelchair ramp is designed to use less hardware and have a stylish, contemporary look. It is designed to address the accessibility needs of the residential and light commercial market. These Modular wheelchair ramps are far superior to ordinary modular ramps and old-fashioned wooden construction ramps that need constant maintenance and periodic replacement.

We have created a whole new concept for designing, ordering, and installing the perfect modular ramp system. Two reasonably mechanically inclined people can install a 24 foot modular ramp system in about 30-60 minutes! Our modular ramp system is perfect for temporary or permanent use. Designed and built with lightweight, yet strong and durable aircraft grade aluminum, they do not rust and are ideal for indoor or outdoor use. These ramps are perfect for use with wheelchairs, scooters, walkers and most other mobility needs.

### EZ Access Modular Ramps

- **Designed to comply with ADA wheelchair ramp specifications\***
- **Use with Wheelchairs, Scooters & More**
- **Easy to install!**
- **Virtually Maintenance Free!**
- **Easy to expand, re-configure or move**
- **Made of durable, lightweight aluminum that does not rust, rot or decay**
- **Standard 36" usable width. Available in 48" or custom widths.**
- **Ramps Support up to 850 lbs. and have a permanent non-skid surface**
- **3-year Warranty & Fast, Free Shipping**



**All our Wheelchair Ramps are proudly Made in the USA!**

## Appropriate Ramp Length

We normally quote ramps that meet the ADA recommendation of 4.8 degrees of incline. You do not normally need to meet this standard for residential use (although we do recommend it). In general, you do not want to go shorter than half of what ADA recommends (9.6 degrees of incline). Consult your user manual of your chair/scooter to confirm the maximum incline it is rated for and always stay within that standard.

For example a 30 inch rise would need a 30 foot long ramp to meet the ADA standard. The shortest suitable ramp for a 30 inch rise would be 15 feet long. The ramps are available in any one foot increment, so you may choose a length that is suitable for your use.

### General Usage Guidelines:

- Manual wheelchair with the person rolling themselves, you should stay closer to ADA's recommendation
- Manual wheelchair with the patient being assisted, you may go as short as half of ADA's recommendation. Keep in mind the weight of the patient and the strength of the person assisting. The shorter the ramp, the more difficult it will be to push the wheelchair.
- Electric Scooter or Wheelchairs should always stay within their manufacture's slope restriction. Please consult your owner's manual or the equipment's manufacturer for this information.

Please let us know if you would like a different length quote.

## Shipping and Delivery



We normally have everything in stock and ready for quick delivery. Free Ground<sup>1</sup> Shipping is included. Normal delivery time is 3-5 business days (e.g., approximately one week from the order date). If you need delivery by a specific date, please let us know about it at the time of order, so we can determine if your shipping would need to be upgraded.

<sup>1</sup> Ground shipping is for the contiguous United States. Ground shipping does not have a guaranteed delivery date and can vary.

## Commercial Applications

The type of ramp system we have quoted for you is intended for Residential or Light Commercial applications. We also have a heavier duty modular ramp system available, which may be more suitable for higher traffic commercial use. It is our Titan Series Ramp with 48 inches usable width and has handrails with vertical pickets. It is Code Compliant with both ADA and IBC 2006 standards. Please let us know if you would like a quote for a Titan Series Ramp (pictured to the right).



## ADA Guideline Basics <sup>2</sup>


The Americans with Disabilities Act (ADA) provides access guidelines that most business are required to meet. Most residential applications do not need to meet ADA guidelines, but they are a good reference point for recommended ramp lengths. Contact your local building inspector for additional information.

- Requires a 1:12 slope ratio which works out to be one foot of ramp for each inch of rise. For instance, a 20 inch rise requires a 20 foot ramp.
- Requires a Minimum 5' x 5' Flat area at the top of the ramp.
- Minimum 36 inches of clear space across the ramp.
- Minimum Platform size is 5' x 5'
- Maximum of 30 feet in a single run of ramp prior to a rest or turn platform.
- Must have handrails on both sides of the ramp

<sup>2</sup> Please note: This guideline is only intended to highlight our interpretation of some of the ADA guidelines and is not intended to replace or supersede ADA guidelines. If you need to meet ADA guidelines, we suggest you consult an ADA Compliance Consultant.

# Modular Ramp Specifications


Designed to meet or exceed ADA Section 4.8 guidelines for Ramp Access

| <b>Ramp and Platform Specifications</b> (custom sizes available) |                 |              |   |                                  |
|--|-----------------|--------------|---|----------------------------------|
|  | Weight Capacity | Usable Width | Width to Outside of Handrails   | Width to outside of Support Feet |
| Ramp Sections  | 850 lbs.        | 36"          | 40 5/8"   | 44"                              |
| 5'x5' Platform   | 850 lbs.        | 60" x 60"    | 64 3/8" x 64 3/8"   | 70 3/4"                          |
| 4'x4' Platform   | 850 lbs.        | 48" x 48"    | 52 3/8" x 52 3/8"   | 58 3/4"                          |
| 4'x5' Platform   | 850 lbs.        | 48" x 60"    | 52 3/8" x 64 3/8"   | 70 3/4" or 58 3/4"               |
| 5'x8' Platform   | 850 lbs.        | 60" x 96"    | 64 3/8" x 104 5/8"  | 117 1/2"                         |
| <b>Handrail &amp; Curb Specifications</b>                        |                 |              |   |                                  |
| Upper Handrail Height  |                 | 34 1/2"      |  |                                  |
| Lower Handrail Height  |                 | 23 1/2"      |   |                                  |
| Handrail Diameter  |                 | 1 1/2"       |   |                                  |
| Ramp Side Curb Height  |                 | 2"           |   |                                  |

All our platforms are designed so you can attach the ramp to any of the four sides. This allows you to go straight across, right or left on the same platform. You can also attach two or more platforms together to make larger decks. All support legs are independently adjustable for easy installation on uneven ground.

**All our Wheelchair Ramps are proudly Made in the USA!**

## Sample Modular Ramp Configurations

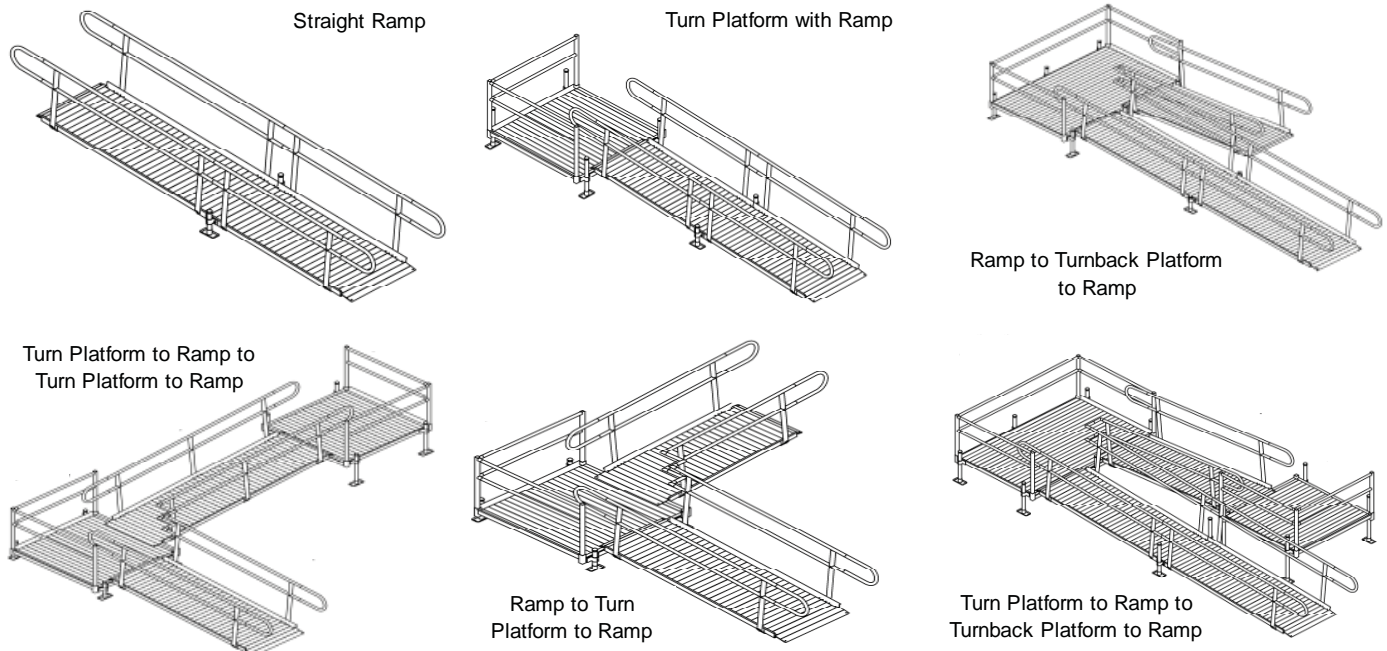

# Express Ramps Unsolicited Testimonials!



"The ramps arrived today and we installed it today. It is a Great Product! Thanks for all your help!"

Paul D. from Oceanside, CA

"I have to commend Express Ramps on their quality and engineering. The quality of materials is excellent! Congratulations on a well engineered system"

John H. - Lincoln Park, NJ

"Hi, I just wanted to let you know my ramp arrived 2 days earlier than expected. I assembled it and it looks great. I found the assembly very simple and straightforward. I was very impressed by the quality and strength of it. The ramps give me a clean professional look to the front of my business. I strongly recommend your ramps to anyone who is in need. They won't be disappointed!"

Randy M. - Port Jervis, NY

"Please forward this message to everybody. I can't help but smile when I think of how easy you made this order. Eric, who placed the order was fantastic and answered all of my questions quickly and professionally. I have had so much trouble with other companies, which will remain nameless, that I had to send you a quick email just to thank you for your quality service"

David Z. - Atlanta, GA

"Received the modular wheelchair ramp and it went in very easy! Thank you!"

Bobby C. - Burlington, VT

"Wow, thank you for the prompt service!!!!. Now I can get my husband out in the sunshine again!"

Barbara Y. - Dallas, TX



## Advantages of Aluminum Ramps over Wooden Ramps

Old-Fashioned wooden ramps may seem like a good alternative to aluminum ramps, but when you really look at the facts, you'll see that aluminum ramps are far superior. Wooden ramps may seem to cost a little less, but when you add up all maintenance costs and eventual demolition/replacement costs, they actually cost a lot more.

| Aluminum Ramps  | Vs. | Wooden Ramps   |
|---|-----|--|
| Durable, long lasting solution                                    |     | Requires periodic demolition and rebuild                                   |
| Will not Rot or Rust  |     | Weathers and Decays  |
| Virtually Maintenance Free!                                       |     | Usually requires regular Maintenance                                       |
| East to install with minimal tools                                |     | Normally requires hiring a contractor                                      |
| Usually No building permit required                               |     | Requires building permit   |
| Easy to move, re-configure or expand                              |     | Requires demolition for changes  |
| Take it with you and reuse if you move!                           |     | Left behind in place or demolished. Typically lowers resale value of home. |
| Captured fasteners, nothing protruding to catch yourself on.      |     | Often has protruding nail heads or screws. Splinter hazard.                |
| Meets most building codes   |     | May not meet local building codes  |
| Stylish Design  |     | Old Fashioned Looking - warp and decay                                     |
| Typically installs within a 1-2 hours                             |     | Typically takes several days after permits                                 |
| No Anchoring into Concrete Required                               |     | Requires Concrete Footings   |
| Smooth Transitions on and off the ramp                            |     | Often uneven joints and bumpy transitions.                                 |
| Made of Environmentally Friendly Aluminum - Completely recyclable |     | Dangerous chemicals used in pressure treated process.                      |
| Has resale value if no longer needed                              |     | No resale value - must be demolished                                       |

## Wooden Ramps Do Not Age Well



Typical Wooden handrail with exposed nails and splinter hazards



Uneven, bumpy transitions, warped slick surface.



Warped and peeling surface, inch high bump to enter/exit ramp.

## Modular Ramp Installation

Installation is not included, however, they are very simple to install and do not require any specialized knowledge. Most people use family members or friends, while others will use a handyman service. You can view a video of a sample installation on our web site : [www.modular-wheelchair-ramps.com](http://www.modular-wheelchair-ramps.com)

**Express Ramps - [www.expressramps.com](http://www.expressramps.com) - 1-866-491-1110**